Cartoon Digital Camera

The instructions



The key that

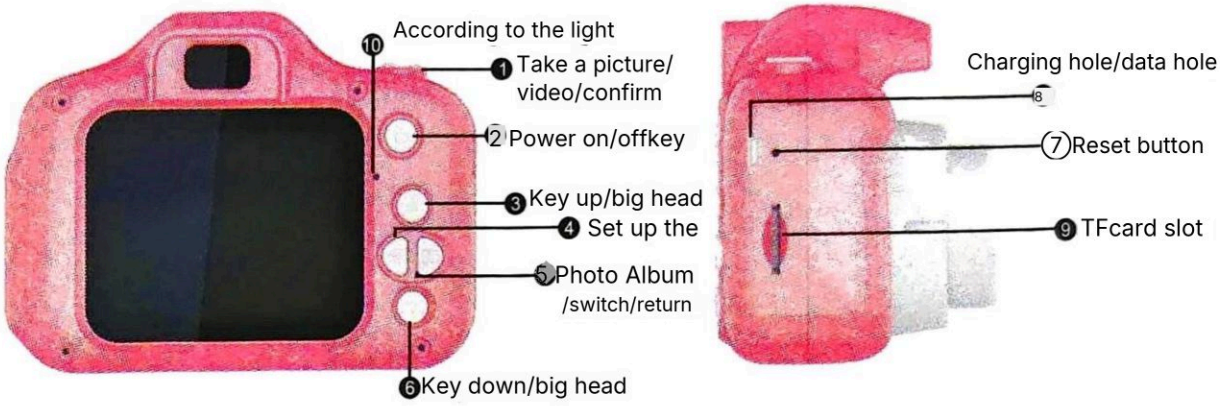

1.Take photos/Video/confirm: tap to take photos or video, and delete photos as confirm button.
2, power off button: long press 2 seconds to power on/off.
3.Added cardless photo taking function-number of photos:10 photos in pu QING/10photos inhighlist/50photosinHIGHDEFINITION
4,the default resolution of the machine is 20M, can support up to 4OM
5,timing photo,for the left button
6,enter the main interface to select music MP3 function
7.Enter the photo mode and press the up button for the function of4 times focal length.
8, enter the main interfaceof thegame interface to increase the fluency,thegame interface with sound,more smooth operation.
9.Enter the photo taking interface,click after the photo is taken successfully,and the photo flies out to the upper right corner.
The machine adds 28 big head stickers/16 filters, 15 high-angle shots/16 filters. /15HIGHDEFINITIONdualshots/16filters
11,chargingcable/data hole:5VchargerUSB port can be used forcharging, connected to theCOMPUTERUSB port can be readPhotographs and videos Taken.
12,TF slot: the memory capacity can be expanded freely, the maximum support 32GTF card, no memory bydefault.
13, Dilali: Urmalchatelitahilofoweofr
startup under the light, off after shutdown.

Troubleshooting

The fault	The fault types	The solution
A	Unable to boot	Please try charging before starting up
B	Prompt memory card error	Please format or replace the memory card
C	Crash, unable to shut down	Press the reset key to restart the machine

Matters needing attention

(1)Whenthecamerapromptsthatthepowerisinsuffcientleaseusetheattachd data cabletochargeit intimeand plug it intothe5Vpower supplyTheconverteror power USB interface forcharging,the machine is not included withthe powercharger.

(2) If the camera encountered problems, please use a steel needle to insert into the reset hole and long press the reset button, try to reset

(3)Do not disassemble, so as not to cause danger, and warranty.

(4)Donot beatorsqueezethecamera,soasnotto damagetheinternal electronic components.

The camera is an electronic product, not waterproof, do not expose the camera to water. the environment of water splashing.

Specification

Batterycapacity		The screen size	2.0-inchIPS screen
The input voltage	5V-1A	Charging time	2 hours
The fuselage is stored	Body no memory, TF card	The largest extension	128G
Packaging containing	Camerahostdatacableinstructionmanualhangingrpe		